


尺寸 : 280x100mm

**ENER-J®**

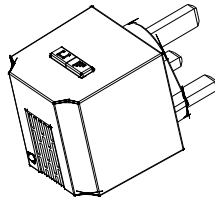

## **User's Guide Chime for Wireless Doorbell**

**SKU: SHA5290**

Adjustable Ringtone: Choose from 18 Melodious  
5 volume levels (including mute), Up to 100db  
Range: 25 meters in indoor, 200 meters in open area  
RF: 433MHz  
Power: 230V  
Plug: UK plug  
Size(without plug) : 68x44x68mm  
Weight: 65 grams

### **Setting Up the Volume:**

- Press the Volume Key once to activate the Volume Controls
- 5 Levels of Volume from High to Low
- The Chime will play the last Level of Volume
- In Mute Mode, there will be Flashing Light with no music

### **Changing Tones of Chime:**

- 18 Melodious Tones to Choose from
- Press Music Key to listen to all the Tones
- The Chime will play the last Tone which was played

### **Pairing with your Doorbell:**

- After the Tone and Volume are Selected please follow the below
- Hold the Volume Key for 5 seconds till you hear 'DING' sound from Chime
- Now your Chimes are ready to be paired
- Please Press the Doorbell button on your Video Doorbell
- Now your Doorbell is paired with the Chime