

SKU


SHA5288

EAN

7061256151901

Model no.

AX-WF127

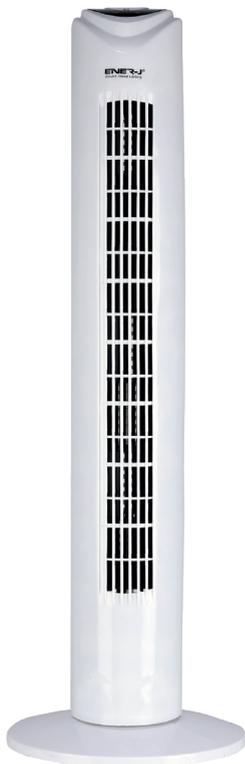

APP
CONTROL



WIND
SETTING



VOICE
CONTROL



SWING FOR BETTER
VENTILATION



TIME
CONTROL



AUTOMATIC
SHUTDOWN TIMER
UP TO 7.5 HOURS



Works With

 amazon alexa

 Google Assistant

Thank you for your supporting and selecting our product. Please read this user manual carefully before operation and operate the product as this manual strictly. Please keep it well for future reference.

IMPORTANT SAFETY INSTRUCTIONS


WARNING: When using electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

- 1.** Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons. This will also void your warranty.
- 2.** Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
- 3.** This product is intended for indoor, household use **ONLY**. Do not use outdoors or for commercial industrial purpose.
- 4.** To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place fan on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the fan.
- 5.** Do not use this product in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- 6.** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 7.** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 8.** This product is not toy! Children should be supervised to ensure that they do not play with the appliance.
- 9.** Turn the fan **OFF** and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning. Make sure the fan is fully assembled before switching on again.
- 10.** To disconnect the fan, first turn the unit **OFF**, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
- 11.** Do not operate the fan in the presence of explosive and/or flammable fumes.

WIFI SMART TOWER FAN

- 12.** Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- 13.** Do not operate the fan with a damaged cord or plug, or if the product malfunctions, or is dropped or damaged in any manner.
- 14.** Avoid contact with moving fan parts. Do not insert any body parts(e.g. finger) or objects through the grill when the fan is operating.
- 15.** The use of attachments not recommended by the manufacturer may be hazardous.
- 16.** Place the fan on a dry level surface to avoid overturning.
- 17.** Do not operate if the fan housing is damaged.
- 18.** Do not cover the grill, or operate in close proximity to curtains, etc. Ensure adequate ventilation around the unit.
- 19.** A loose fit between the AC outlet(receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified technician to replace loose or worn outlet.
- 20.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid hazardous.
- 21.** If the fan is not working properly, contact a qualified technician for examination and repair. Never attempt to dismantle the fan yourself.
- 22.** Never install or store the unit where it could be subject to:
 - a. Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - b. Direct sunlight
 - c. Mechanical vibration or shock
 - d. Excessive dust
 - e. Lack of ventilation, such as cabinet or bookcase
 - d. Uneven surface
- 23.** Do not leave the fan running unattended.
- 24.** Do not hang or mount fan on a wall or ceiling
- 25.** The fan must be fully and properly assembled before use.

OVERVIEW

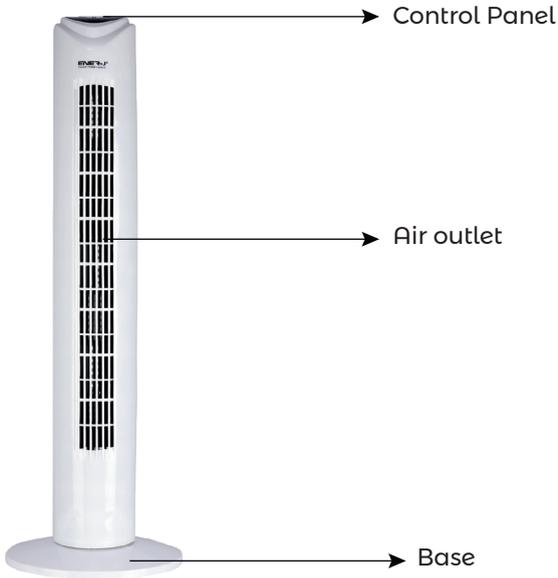

BASE ASSEMBLY

1. Put the 4pcs white round rubber into the two halves unassembled base.
2. Assembled the two halves bases well then run the power cord through the central gap.
3. Connect the item and base by tightening with 4 short screws and 2 long screws.
4. Put the power cord into the corresponding slots on the other half and securing by the transparent piece then tightening with 2 short screws .



IMPORTANT: Make sure that the power cord passes through the slot on the rear half of the base.

OPERATION

Warning: Make sure that the base has been securely attached before switching on.

1. Stand the unit upright on flat, stable ground without any obstacles near it.
2. Connect the power plug to a suitable electrical outlet with the same specifications as mentioned in the unit's rating label (see Technical Specifications for details).
3. You may now use control panel buttons or the remote control to operate the fan.

Note: Always turn off the unit and unplug it from the socket when it is not in use.

CONTROL PANEL



Power:

- Press the Power button to turn on the fan
- Press again to switch it to standby.

Swing:

- Press the Swing button to turn on the oscillation. The swing indicator turns on.
- Press again to turn off oscillation.

Speed:

- Press the Speed button to change fan speed. There are 3 possible speeds: Low/Medium/High. The corresponding indicator turns on.

Mode:

- Normal mode: The fan operates in the constant speed set using the Speed button.
- Natural mode: The unit simulates a natural breeze.
- Sleep mode: The unit simulates a gentle breeze suitable for night-time use.

Timer:

- Press this button to set the turn-off delay for the unit.
- The turn-off delay can be set in half-hour increments from 0.5 to 7.5 hours. There are 4 indicators -0.5H,1H,2H and 4H. For example, if the timer is set for 3 hours, the 1H and 2H indicators turn on.

CLEANING AND MAINTENANCE

Caution:

- Always switch off and unplug the fan before performing any cleaning.
- Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the components.

1. Use a soft duster or a rag to dust off all the surfaces.
2. Wipe all external surfaces with a soft, damp(not wet) cloth dipped in mild, soapy water.

Caution: ensure that water doesn't get inside the unit.

2. Use a dry cloth to thoroughly dry the fan before plugging it into the power source.

TECHNICAL SPECIFICATIONS

Rated voltage:	220V~50Hz
Rated power:	42W

If you do not plan to use the fan for extended periods of time, it is recommended that it's cleaned and stored (preferably in its original packaging) in a cool, dry place.



The crossed out wheellie bin symbol on electrical goods means that you should not put this item in your normal household waste bin. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Do not put your used batteries with you household rubbish. Take them to an appropriate disposal/collection site.

ADD device:

1. Download enerjsmart app




Android

iOS

Please scan the QR code or download 'ENERJSMART' APP through iOS Playstore or Google Playstore.

2. Registration

Register through the email address (recommended) and complete the verification code process.

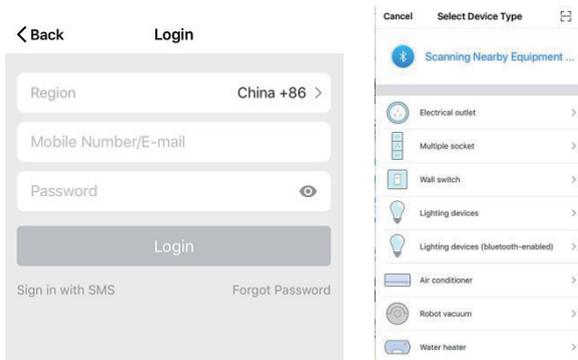


3. Easy Mode(Recommended)

- Preparation: Ensure device is powered. Long press the “mode” button for 5 seconds until the indicator light flashes rapidly.
- The phone has an active Wi-Fi connection and is connected to the internet.
- Tap the icon “+” on the top right corner of “My Device”, and choose Fan (Wifi) under the Small Home Appliances category.


WIFI SMART TOWER FAN

- Enter the Wifi password when promoted & follow on screen instructions for pairing.

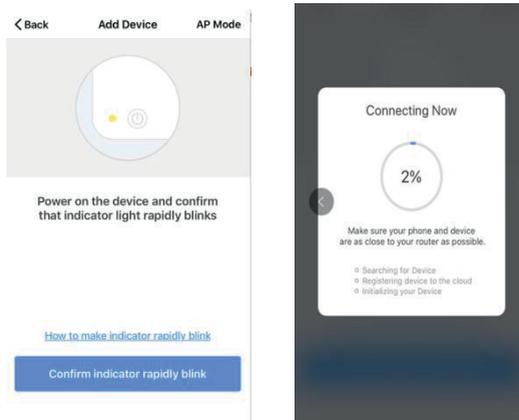


4. Enable enerjsmart skill in Alexa APP


- 4.1 Open Alexa (amazon account), choose 'Skills' in the options bar, and then search "enerjsmart" in the input box.

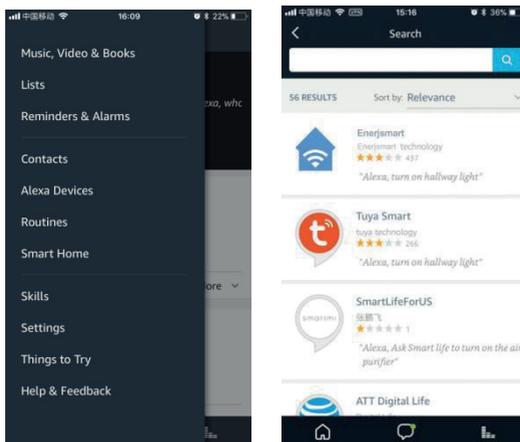


4.2 Select enerjsmart in the search results, and then click “Enable Skill.”

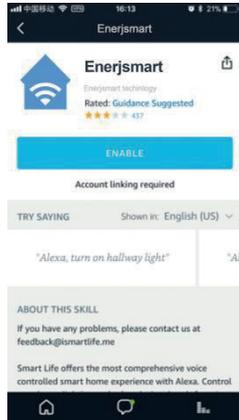

4.3 Then input the user name and password of enerjsmart APP that you had previously registered.

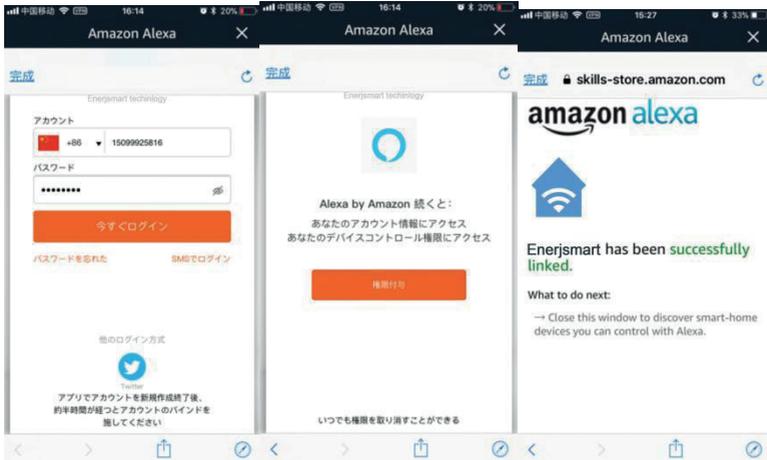

4.4 Go back to Alexa home page, choose 'smart home' in the option bar, press '+' (add device) button, searching devices related to applications automatically.

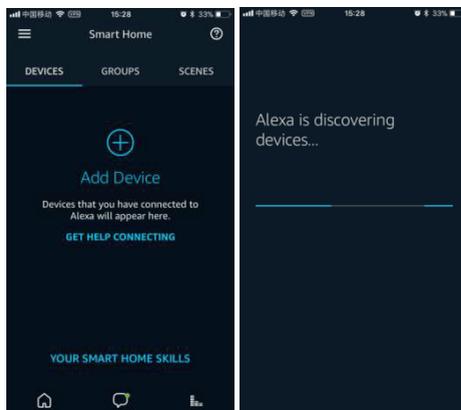

4.5 After the above operation is successful, you can control the device Via Alexa.

Thank you for choosing ENER-J!

Customer satisfaction is our TOP priority. Please let us know how you felt about your experience.

Happy? We are so delighted that you are pleased with our product. Feel free to express your newfound joy! Share your experience by writing a review.

Not Happy? If you are not fully satisfied with the item you received, have any problems like damages or questions, please contact us. We typically respond within 24-48 hours.

Stuck? Confused?

Contact our Technical Support team on:
T: +44 (0)1291 446 105 E: support@ener-j.co.uk
Lines are open Mon - Fri (8am to 4pm)

Imported and Marketed By:

ENERJ SMART LTD.
Unit 11D cosgrove Way, Luton LU11XL,
United Kingdom